

**CLIPSAL®**

by Schneider Electric

## **F-Type Crimp Connector**

**3105RG6F**

**3105RG6PM**


**3105RG6PF**



Installation Instructions

# RG6 F-Type Crimp Connector

1. Strip jacket through to braid 12mm (using 3105CS6 stripping tool).
2. Remove dielectric and foil to centre conductor 6mm.
3. Remove jacket and fold back braid 6mm.

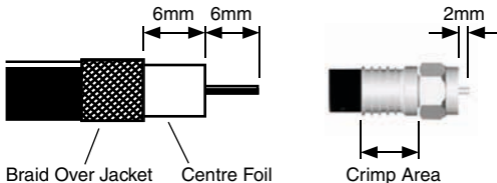

4. Slide on connector until only 2mm of centre conductor is protruding past end.
5. Crimp connector (using 3105CT611 crimping tool).

---

## Clipsal Australia Pty Ltd

A member of Schneider Electric

[clipsal.com](http://clipsal.com)

Contact us: [clipsal.com/feedback](http://clipsal.com/feedback)

National Customer Care Enquiries:

**Tel 1300 2025 25 Fax 1300 2025 56**

Clipsal Australia Pty Ltd reserves the right to change specifications, modify designs and discontinue items without incurring obligation and whilst every effort is made to ensure that descriptions, specifications and other information in this catalogue are correct, no warranty is given in respect thereof and the company shall not be liable for any error therein.

© Clipsal Australia Pty Ltd. The identified trademarks and copyrights are the property of Clipsal Australia Pty Ltd unless otherwise noted.